

Easel & Swing Frame(s) - Assembly



Frame Assembly:

1. Place the 'Frame' on it's side
2. Secure the 'Feet' to the bottom of the frame

Crossbar (Top)

1. Decide how high you want the top crossbar
2. Now secure 'Top Crossbar' onto the 'Frame'

Crossbar (Bottom)

1. Pending on the Swing Frame purchased.....
2. Hold Swing Frame & insert into top crossbar
3. Take note where the 'Bottom' Crossbar needs to be
4. Now secure the 'Bottom Crossbar'

Swing Frames:

1. Simply push up into 'Top Crossbar'
2. Then, drop into the 'Bottom Crossbar'
3. Repeat until all swing Frames are completed



Easel Measurements:

Height = 1800mm

Width = 600mm

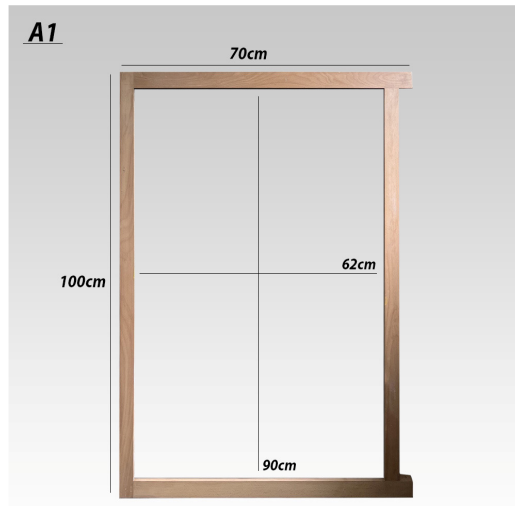
Depth = 500mm

3x Swing Frame (Sizes)**A1 - Swing Frame (Sizes)**

Height = 100cm (1000mm)

Width = 70cm (700mm)

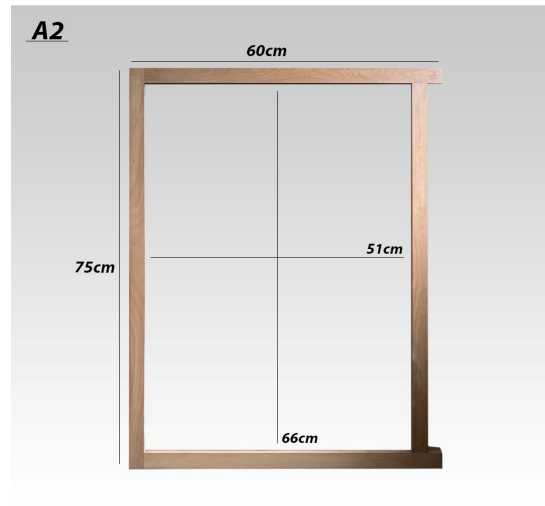
Internal = 90cm (900mm) x 62cm (620mm)

**A2 - Swing Frame (Sizes)**

Height = 75cm (750mm)

Width = 60cm (600mm)

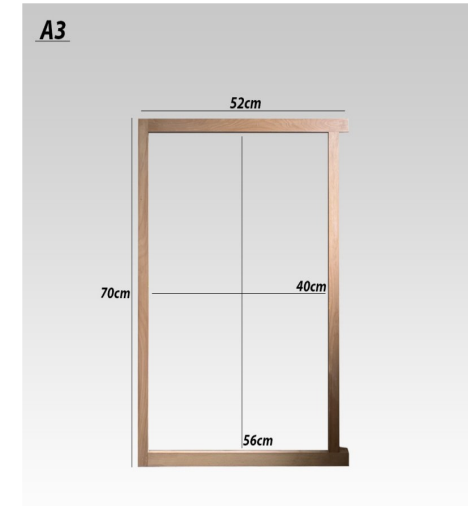
Internal = 66cm (660mm) x 51cm (510mm)

**A3 - Swing Frame (Sizes)**

Height = 70cm (700mm)

Width = 52cm (520mm)

Internal = 54cm (540mm) x 40cm (400mm)

**Documents:**

- 1 Each Swing Frame is designed to add - either A1 - A2 - A3 Portrait Documents (2x Documents per Swing Frame) + all re-usable as documents need changing
- 2 Remove the 1x Foam Panel + 2x PVC Sheets, now sandwich your documents - then, re-insert into the Swing Frame (takes seconds)
- 3 **TIP** - If you plan to add several 'Photographs' - it may prove wise to utilise 'Blue-Tack' to each photo, to prevent them dropping to the bottom of the display