

Supplied:

3x Drops of = A3 Landscape (4 per drop)

LED Details:

Width (mm)	Height (mm)	Cable Centres	Wattage	Colour
470	337	460	10	Satin Silver


Supplied Components:

No	Component
12	A3 Landscape LED Panels (Double-Sided)
3	60W Power Transformers
6	Power Transistors
6	Suspended Cables @4M
6	Ceiling Connectors
6	Floor Connectors
250	250x Sheets of Back-Lit Paper-120gsm

Fitting - Space Required

Start Gap (Left Side)	150 mm
1st Drop of LEDs	470 mm
Gap	150 mm
2nd Drop of LEDs	470 mm
Gap	150 mm
3rd Drop of LEDs	470 mm
End Gap (Right Side)	150 mm

Total Space = **2010 mm**

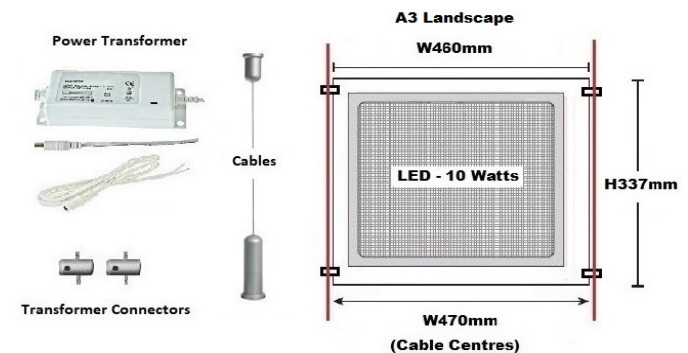

3x Drops of = A3 Landscape (4 per drop)

Fitting Instructions

Step 1 - Ceiling takes all the supported weight

- 1 The most important aspect of these displays is the ceiling fittings - ensuring cables are secured to the ceiling baton, as all the weight is supported from the ceiling
- 2 IF you have a metal beam on your ceiling, ALWAYS, secure a wooden baton to the metal beam.....before any suspended cables!

Step 2 - Display Space Utilised

- 1 This whole display takes upon a total width of = 2010mm
This given width is assuming your are adding all the gaps of 150mm (each)
IF you have a wider window, then, you could always widen all the gaps but, make sure they are all the same width

Step 3 - Fitting Instructions based on our = 2010mm

- 1 Decide where your 1st supporting cable is to be fitted (at least 150mm from the left) - now secure the 1st cable to your ceiling
- 2 Double check the supplied LED, to measure the location of the 2nd cable (it should be about 470mm) - now secure the 2nd cable
- 3 Now add the LEDs between the 2x suspended cables (each LED has 4x corner grippers, secure these to the suspended cables)
OK at this point you should have your LED's secured to the 2x suspended cables
- 4 Now add the 2nd drop of suspended cables, remembering to leave a gap of 150mm
- 5 Now add the 3rd drop of suspended cables, remembering to leave a gap of 150mm
- 6 Each suspended cable should have 1x power transistor attached to it
If you plan to add the 60W Power Transformer at the top, add the transistors to the top
If you plan to add the 60W Power Transformer at the bottom, add the transistors to the bottom
- 7 Suspended cables (floor) - each cable is supplied @ 4M - secure your floor connectors to the floor
Now secure each cable into its each floor connector, cutting out any excess cable, as you are fitting each cable
- 8 *Power Transformer has 2x thin cables, connect the "+" to the left cable & the "-" to the right cable*
- 9 *1st Drop - turn on the power, if everything is OK, all LED's should be illuminating*
- 10 *2nd Drop - turn on the power, if everything is OK, all LED's should be illuminating*
- 11 *3rd Drop - turn on the power, if everything is OK, all LED's should be illuminating*

3x Drops of = A3 Landscape (4 per drop)