

LED "COMPACT" Light Pockets - Looking to Purchase?

- The '6' Basic Rules:
- 1 LED Pockets are supplied in 2x versions = Landscape & Portrait
 - 2 The Golden Rule with LED Displays = You can add 1, 2, 3, 4x LEDs - to a maximum of 4 LED's
 - 3 Each additional column must have a gap between them (due to the power supply) - minimum recommended is = 150mm
 - 4 All the weight is suspended from the ceiling so, solid anchor points are crucial
 - 5 If adding several rows of LEDs - then, we could arrange a single 'More Powerful Transformer' - Tel: 01244 470903
 - 6 We offer a 'Full Design Service' & 'Installation Service' - Tel: 01244 470903

Index:

Page 1	Measurements
Page 2	Landscape
Page 3	Portrait
Page 4	Fitting Instructions

A2 Portrait - Compact LED's

Width (mm)	Height (mm)	Cable Centres	Weight	Wattage
460	624	470	6.5	12




A2 Landscape - Compact LED's

Width (mm)	Height (mm)	Cable Centres	Weight	Wattage
633	449	643	6.5	12



A2 Portrait A2 Landscape - Compact LED's

"LED LANDSCAPE" - Measurements - Reveals 3x Drops of LED's & Total Space Required

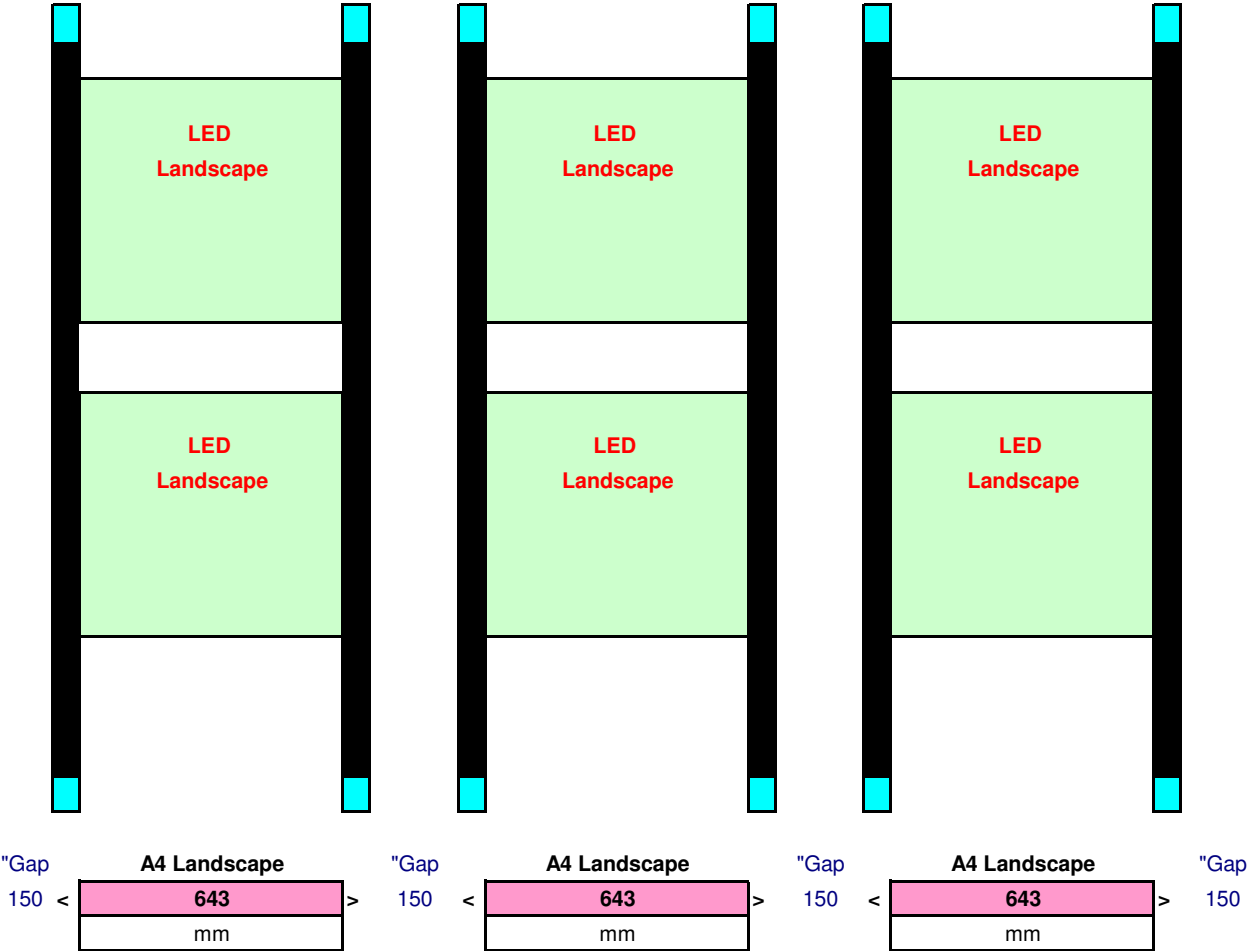


1x Drop	
LED Hardware =	643 mm
2x End Gaps	300 mm
Central Gap (None)	0 mm
Total Space = 943 mm	

2x Drops	
LED Hardware =	643 mm
LED Hardware =	643 mm
2x End Gaps	300 mm
1x Central Gap =	150 mm
Total Space = 1736 mm	

3x Drops	
LED Hardware =	643 mm
LED Hardware =	643 mm
LED Hardware =	643 mm
2x End Gaps	300 mm
2x Central Gaps =	300 mm
Total Space = 2529 mm	

"LED PORTRAIT" - Measurements - Reveals 3x Drops of LED's & Total Space Required

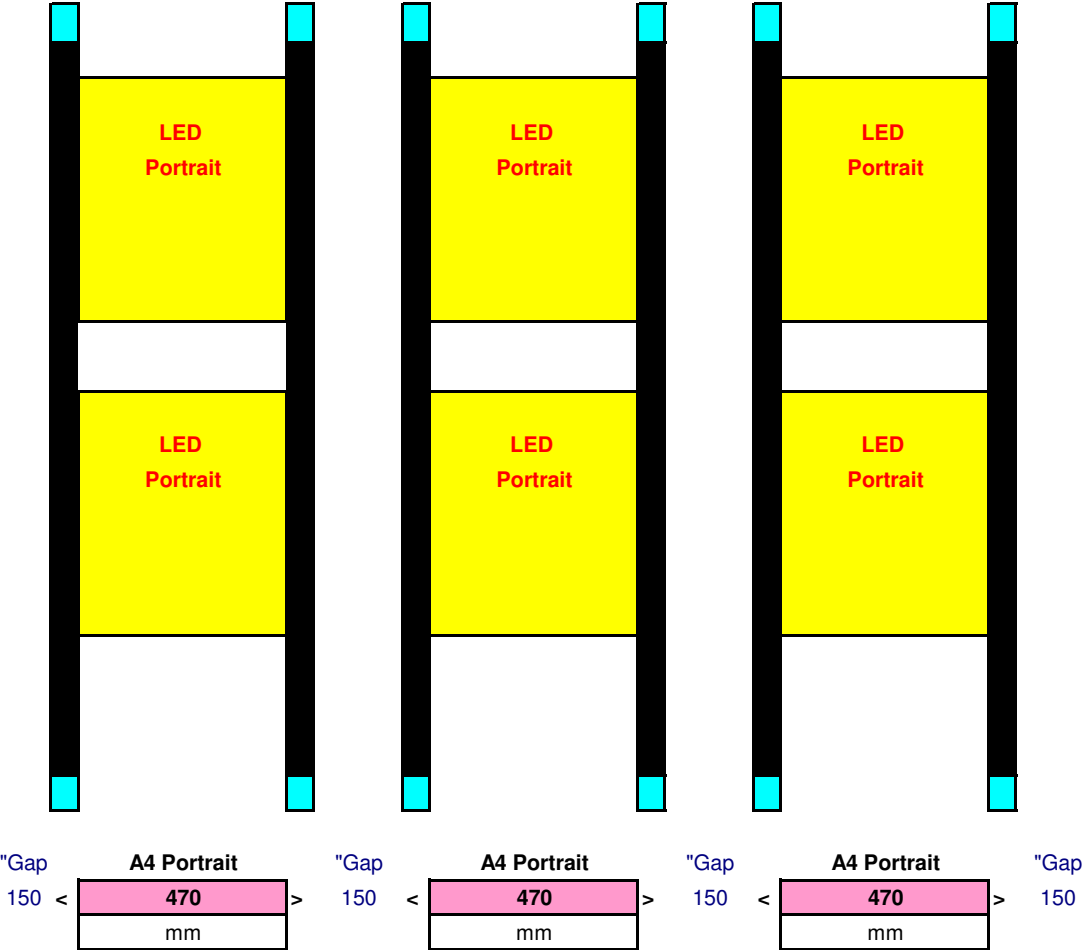

1x Drop	
LED Hardware =	470 mm
2x End Gaps	300 mm
Central Gap (None)	0 mm
Total Space =	770 mm

2x Drops	
LED Hardware =	470 mm
LED Hardware =	470 mm
2x End Gaps	300 mm
1x Central Gap =	150 mm
Total Space =	1390 mm

3x Drops	
LED Hardware =	470 mm
LED Hardware =	470 mm
LED Hardware =	470 mm
2x End Gaps	300 mm
2x Central Gaps =	300 mm
Total Space =	2010 mm

Fitting Instructions

Example with Image = LED Landscape

Cable 1 *LED* *Cable 2*



Top Tip:

Add a power Surge Protector - to protect your investment

Step 1:

1. The most important aspect of these displays is the ceiling fitting
2. Always ensure a true solid anchor on the ceiling area
3. Never anchor to a metal beam (due to the utilised Power Transformer)
4. If you have a metal beam - always attach a wooden baton to the metal beam

Step 2:

1. Secure "Cable No 1" to your ceiling
2. Now measure the gap on the LED for the "Cable No 2"
3. Secure "Cable No 2" to your ceiling
4. You should now have 2x cables hanging loose

Step 3:

1. Example image reveals 4x LED panels
2. Secure your FIRST LED between the cables (LED has built-in-side-grippers)
3. Now decide what the gap needs to be between each additional LED Panels
4. Now secure all remaining LED Panels to the cables

Step 4:

1. Now plumb the bottom cables & secure into place
2. You will need to trim the cables to fit the bottom holder

Step 5:

1. Now with the use of a small spirit level - make finer adjustments to each LED Panel
2. IF adding additional rows, always add a minimum gap of 150mm
3. Now repeat steps 1 to 5 for each additional row

Step 6:

1. Now add your power terminals to the cable
2. Now connect 1x Power Transformer to each drop, to these 2x power terminals
3. Now turn on each power transformer - that's it